

FI 101 - 2024 / 11 / 14

料 号	705-ZF0800-00
项 目	ZF08说明书
成品尺寸	90*90 mm
公 差	±0.5mm
材 质	105g 哑粉纸

颜色要求 双色印刷 PANTONE 1235C

工 艺 折页(正反印刷)

其 他

包装结构 江叶群 产品经理 张欣


设计师 杨柳 文案 李敏 伍青蕾

重要:PDF 文件仅供预览,实际印刷请使用 AI 转曲文档 (或 Cdr 转曲文档)



印刷要求

色相正确、印迹牢固、套印准确、各色套印不露杂色, 套印误差<1mm,模切走位<±1mm

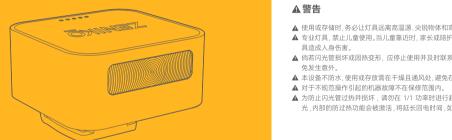

ZF08 迷你机顶闪光灯

感谢您购买 7FNIKO 产品!

摄影新乐趣。

ZF08 迷你机顶闪光灯做到真正的迷你身形,相机无负重外带更省心。5 档功率任意调节,内置锂电池。采 1 开关 / 讨闪按键 用单触点热靴以便适配多种相机型号 只需插入即可实现同步触发等多种特点 计您轻松入门闪光 体验 3. 指示灯①

- ▲ 使用或存储时,务必让灯具远离高温源、尖锐物体和高腐蚀性物体等。
- ▲ 专业灯具 禁止儿童使用、当儿童靠近时 家长或晓护人必须密切监督 以免儿童因碰撞灯具或私用灯 9 闪光管
- ▲ 倘若闪光管损坏或因热变形,应停止使用并及时联系制造商、服务代理商或合格的维修人员更换,以
- ▲ 本设备不防水、使用或存放需在干燥目通风处、避免在雨天、潮湿、多尘或过热环境下使用。
- ▲ 为防止闪光管过热并损坏,请勿在 1/1 功率时进行超过 40 次的快速连续闪光。若进行多次的连续闪 光,内部的防过热功能会被激活,将延长回电时间,如果发生这种现象,至少让闪光灯冷却约10分钟。

10 热靴

部件名称

4. 指示灯②

5. 指示灯③

6. 指示灯④

7 指示灯⑤

灯体 ×1 USB 充电线 ×1 收纳包 ×1 说明书 ×1

开机:长按此按键,指示灯亮起,即开机成功:

示同电结束 此时短按一次此按键灯头可试闪一次。

注:1/16档位开始递增功率时 指示灯会逐个亮起 如 1/16增加到 1/1 时 5 个指示灯全部亮起。

试闪: 开机后 可查看指示灯状态 红灯常亮表示正在回电 此状态无法进行试闪: 待几秒后绿灯常亮表

物品清单



开关/试闪按键

 
低电提示





USB-C充电口

注: 充电过程中 闪光灯无法引闪











指示灯①红灯常亮并且指示灯②红灯闪烁:表示目前电量大于20%但低于40%。

指示灯①②红灯常亮并且指示灯③红灯闪烁:表示目前电量大于40%但低于60%。

指示灯①②③红灯常亮并且指示灯④红灯闪烁:表示目前电量大干60%但低于80%。

指示灯①②③④红灯常亮并且指示灯⑤红灯闪烁;表示目前电量大于80%但低于100%。

关机状态下接入电源,通过指示灯状态了解充电进度。

指示灯①红灯闪烁:表示目前电量低于 20%。

指示灯①②③④⑤全部绿灯常亮:表示已充满电。



规格参数

5V - 0.5A(Max.)

≈1 /\Bt 10 分钟

6500K±200K

-10°C ~ +35°C

≈440 次

USB-C 充电口输入

闪光次数(1/1 档位)

 
回电时间(1/1 档位)

充电时间











规格和参数如有变更,恕不另行通知。

 

 

- ▲ Machine failures caused by non-standard operation are not covered by the warranty.
- in fast succession at 1/1 full power. If you fire more flashes in short intervals, the inner over-temperature protection function may be activated and make the recycle time longer. If this occurs, allow a rest time of about 10 minutes, and the flash unit will then return to normal.

Thank you for purchasing!

Foreword

▲ Warning

Zeniko's mini camera flash ZF08 comes with a super mini size to enable weightless attachment to cameras, 5 steps of adjustable power and built-in lithium battery give practicality and portability. Legacy hot shoe provides wide compatibility and plugged-in triggering. It's a perfect entry-level flash

objects, highly corrosive objects, etc.

to enjoy the fun of photography.

A To avoid overheating and deteriorating the flash head, do not fire more than 40 continuous flashes

8. USB-C Charging Port 9. Flash Tube

Name of Parts

2, Power Step Button

3. Indicator ①

4, Indicator 2

5, Indicator ③

6. Indicator 4

7. Indicator (5)

1. Power Switch/Test Button

▲ When using or storing, be sure to keep the fixture away from high-temperature sources, sharp

10, Hot Shoe

Power On: Press and hold the button to make the indicator lightened on, the flash is turned on.

Flash Body

What's Inside

Test: After powering on, the red light is constant on indicates that the flash is recycling, which cannot











Instruction

Manual×1



关注我们。带你常玩新品。趣学补光。

Follow us to explore the fun of filling light

Power Switch/Test Button

USB Charging

be tested. After a few seconds, the green light is constant on indicates recycle is done, then press the button once to fire a testing flash.

Power Off: Press and hold the button until the light turns off, the flash is turned off.

深圳卓立久科技有限公司

电话: 0755-25106331

Zeniko Technology Co., LTD

Tel: +86-755-25106331

地址、深圳市罗湖区桂园街道新国社区深南东路5033号余山大厦1208

www.zeniko.com



















Power Step Button

After powering on, short press the button can choose the power in 5 steps from 1/16 to 1/1, press and power off state. hold this button can check the battery level.

Indicator ① is on indicates that the flash is in 1/16 power step.

Indicator ② is on indicates that the flash is in 1/8 power step.

Indicator (3) is on indicates that the flash is in 1/4 power step.

Indicator @ is on indicates that the flash is in 1/2 power step. Indicator (5) is on indicates that the flash is in 1/1 power step.

Note: the indicators will be lightened on incremently when the power step is gradually increased from 1/16 to 1/1, until 5 is more than 40% but less than 60%. indicators are all lightened on in 1/1 step.

When the power level is lower than 20%, the indicators blink red after firing a flash and recycling. indicating that it is in a low power state.

Indicator ① to ⑤ all blink red: in 1/1 power step and low battery level.

Note: Please charge the flash in time when the battery level is low.

Auto Power Off

1. The flash will shut down automatically after 30 minutes of idle use.

2. When the power is about to run out, all the indicators will blink red at the same time for 30s and then automatically shut down.

Technical Data

Indicator ① blinks red indicates that the current battery power is less than 20%.

USB-C Charging Port

more than 20% but less than 40%.

power is more than 60% but less than 80%.

Note: The flash cannot be triggered during charging.

Indicator ① is constant on red and indicator ② blinks red indicates that the current battery power is

Indicator (D&Q) are constant on red and indicator (3) blinks red indicates that the current battery power

Indicator ①&②&③ are constant on red and indicator ④ blinks red indicates that the current battery

Sync Triggering

Indicator ①&②&③&④&⑤ are all constant on green indicates that the battery is fully charged.

Low Battery Alert

The charging progress is indicated through the indicator status after connecting to power supply in Built-in Lithium Battery

USB-C Charging Port Input

Flash Power Steps

Color Temperature Working Environment Tem

Indicator 10&2&3&4 are constant on red and indicator 6 blinks red indicates that the current battery power is more than 80% but less than 100%.

Specifications and data may subject to changes without notice.

	ZF08	This device complies with part 15 of the FCC Rules.			
	3.8V, 470mAh	conditions:			
it	5V-0.5A (Max.)	 (1) This device may not cause harmful interfere (2) this device must accept any interference rec 			
	≈1h 10min	operation.			
	≈440	·			
)	≈3s	Any Changes or modifications not expressly a			
	5: 1/16 to 1/1	void the user's authority to operate the equipmen			
	6500K±200K	Note: This equipment has been tested and found to			
nperature	-10°C ~ +35°C	pursuant to part 15 of the FCC Rules, These limits a			
	Hot Shoe	against harmful interference in a residential installati			

-Increase the separation between the equipment and receiver.

-Reorient or relocate the receiving antenna.

be used in all EU member states.

WWW.ZENIKO.COM/EU/ZE08.PDF

requirements and other relevant provisions of Directive 2014/35/EU.2014/30/EU. They are allowed to

For more information of DoC. Please click this web link:

FCC Statement

尊敬的用户,本保修卡是申请保修服务的重要凭证,请您配合销售商填写并妥善保管,谢谢 s. Operation is subject to the following two 当使用、维护或 保管导致的故障或损坏 如: 不当搬运 非按产品合理预期用途使用: 不当插拨外接设备:

您可直接与产品销售商或授权服务机构联系。申请保修时,您应提供有效的保修卡作为保修凭证,方可获 得保修。如您不能提供有效的保修卡,则在我们确认产品或部件属于保修范围的情况下,也可以为您提供

- ived, including interference that may cause undesired

产品保修

销售商信息

如何获得保修服务

保修 但这不作为我们的义务。

oved by the party responsible for compliance could

赠品及其他出厂后附加的部件等)不在此保修承诺内。

to comply with the limits for a Class B digital device. are designed to provide reasonable protection tallation. This equipment generates uses and can 注: 此表应由销售商盖章确认 radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is 本文件适用于相关《产品保修信息》(见后面说明)所列产品,其他非属此范围的产品或部件(如促销品、

connected. Zeniko Technology Co., LTD hereby declares that this equipment are in compliance with the essential 产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起簋、购买日以购买 -Consult the dealer or an experienced radio/TV technician for help. 产品时保修卡登记日期为准。

encouraged to try to correct the interference by one or more of the following measures:

-Connect the equipment into an outlet on a circuit different from that to which the receiver is

如产品存在下列情况,本文件项下的保证和服务将不适用(1)产品或部件超过相应保修期;(2)错误或不

不适用保修的情况

产品保修和服务支持信息

产品的保修期和服务类型按以下((产品保修信息))执行:

如外壳,保护罩,锁紧装置,包装等。

跌落或外力挤压;接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境;③由非卓立久授权机构或人	
员安装、修理、更改、添加或拆卸造成的故障或损坏; ④产品或部件原有识别信息被修改变更或除去; ⑤	Product Info
无有效保修卡; ⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏; ⑦因不可抗力或意	Customer Ir
外事件造成的故障或损坏; ⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况,您应向相关	
责任方寻求解决,卓立久对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品 不能正常使用的,不是保修范围内的故障,产品使用过程中正常的脱色,磨损和消耗,不是保修范围内的	Seller Inforr
故障。	

Warranty

attached.etc.) are not included in this warranty scope. Warranty Period

fill in the following form in coordination with the seller and safe-keep it. Thank you!

Inapplicable Cases

information). Other products or accessories (e.g. promotional items give aways and additional accessories

Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is

The warranty period of products and accessories isimplemented according to the relevant Product

bought for the first time. And the purchase date is considered as the date registered on the warranty card when

How to Get the Maintenance Service

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please

institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

the breakage within the maintenance scope.

If maintenance service is needed, you can directly contact the product distributor or authorized service

maintenance or preservation, such as improper packing, improper usage, in external equipment, falling off or squeezing by external force, contacting o temperature, solvent, acid, base, flooding and damp environments, etc; ③ B non-authorized institution or staff in the process of installation, maintenance, alternation, addition and Note: This form shall be sealed by the seller. detachment: (4) The original identifying information of product or accessory is modified, alternated, or removed; (S) No valid warranty card; (6) Breakage or damage caused by using illegally authorized, nonstandard or non-public released software: ② Breakage or damage caused by force majeure or accident; (8) Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not

Maintenance and Service Support Information The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Name

maintenance scope, but that shall not be considered as our obligation.	туре		Period (month)	Service Type	
Inapplicable Cases	Parts	Circuit Board	12	Customer sends the product to designated site	
The guarantee and service offered by this document are not applicable in the following cases: The product or accessory has expired its warranty period; Preakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out		Electrical parts e.g.battery charger, etc.	12	Customer sends the product to designated site	
external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; © preakage or damage caused by non-authorized institution of staff in the process of installation maintenance alternation addition and	Other Items	Lamp body, lamp cover, locking device, package, etc.	No	Without warranty	

Zeniko After-sale Service Call: +86-755-25106331